

# HP POWER ANCHOR

## Product Installation Sheet



REV. 0518

## Required Equipment

- Rivet gun
- Dust Mask
- Safety Glasses
- Gloves
- Diagonal pliers
- Needle nose pliers



### WANT TO BE FEATURED?


FOLLOW, POST, TAG:

@HEATSHIELDPRODUCTS

#RACETESTED

## Installation Steps

1. Use your pre-cut and pre-fit piece of Heatshield Armor Series insulation. Locate the Power Anchor points on the shield and mark them, We recommend a minim of 1/4 from each edge. Image 1.
2. Grab one pop rivet and use the sharp end to poke the holes through your Heatshield Armor series pre-cut and pre-fit shield. Image 2.
3. Place a pop rivet into your rivet gun. Slide a speed washer onto the rivet. We recommend having the taper of the washer facing toward the mandrel head of the rivet (round portion) Image 3.
4. Grab the rivet gun with rivet and speed washer and line it up on the insulation or "hot side" of your Armor Series shield. Push it through so the mandrel head pokes through the aluminum or lava side of the Armor.
5. Slide a Power Anchor onto the protruding rivet. IMPORTANT: Make sure the Power anchor is in correct orientation so you can attach your included wire or HP Spring (sold separately).
6. While holding the Power Anchor onto the rivet with one hand, use your other hand to squeeze the rivet and secure the Power Anchor. Image 4.
7. Repeat Steps 2 through 4 as needed.
8. When you are finished installing your Power Anchors, you can now attach your Heatshield Armor Series insulation with the included Inconel wire. Image 6

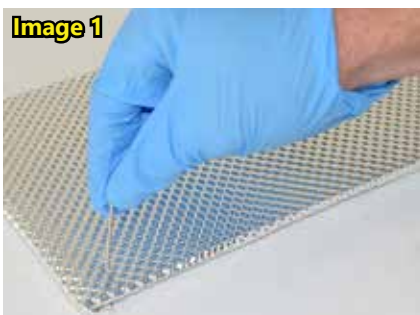

**HEATSHIELD PRODUCTS, INC.**

Escondido, CA

©Heatshield Products, Inc.



(760) 751-0441

tech@heatshieldproducts.com

www.heatshieldproducts.com