

MANTLEFLECT SHIELD™


Product Installation



Revision: 01.20

Tools Required

- Heavy-duty scissors or utility knife
- Poster board or butcher paper
- Isopropyl alcohol or other non-residue cleaner
- Optional - Drywall screws for drywall applications

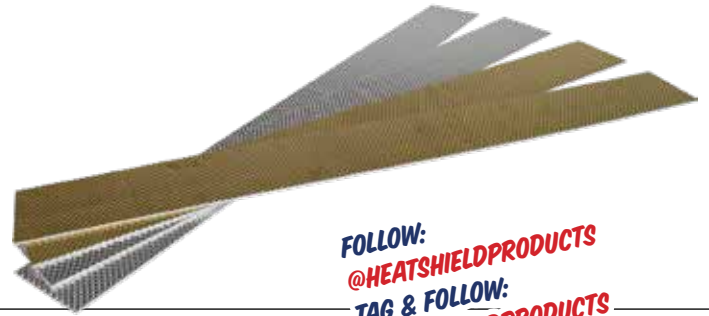

FOLLOW:
@HEATSHIELDPRODUCTS
TAG & FOLLOW:
@HEATSHIELDPRODUCTS
#DIY
FOR YOUR CHANCE TO BE
FEATURED IN OUR FEED!

Installation Tips

Always wear safety glasses, dust mask and gloves when working with MantleFlect Shield™.

Use poster board or butcher paper to make a template.

MantleFlect Shield™ works best on a dust free surface.

It is recommended you paint or prime drywall before applying MantleFlect Shield and wipe it clean after it has dried.

Do not cover vents for TV or sound bar applications.

This product is electrically conductive, be sure to insulate any terminals or circuits that may come in contact with this product.

OPTIONAL - You can use the included foil tape to finish the edges. It is strictly cosmetic and optional.

Installation Steps

1. Measure the mantle, TV, sound bar or drywall to be protected. For surfaces that are not flat and have a curve to them, we strongly recommend making a template using paper or cardboard.
2. Carefully transfer your measurements to the MantleFlect Shield™, and cut out with a heavy duty pair of scissors or utility knife
3. Mantle, TV, sound bar or drywall temperature should be at least 60°F when applying, sticking onto anything colder may not allow adhesive to set up properly.
4. Be sure mantle, tv, speaker, or wall surface is dust free and clean. Drywall should have one coat of paint or primer. We strongly recommend rubbing the surface with a pre-paint cleaner or isopropyl alcohol (or other non-residue cleaner).
5. Tricky Step: Carefully peel the adhesive backing off the MantleFlect Shield™, do not peel more than 1/4" from the edge until you are sure the adhesive backing is not peeling off with the backing paper. We strongly recommend using a razor blade or utility knife to hold the corner of the adhesive to the KoolCore insulation while removing backing of the MantleFlect Shield™.
6. Lay the MantleFlect Shield™ by starting on one edge of the cabinet or wall and work out slowly to ensure no "bubbles" occur. Air bubbles will cause the material to not stick and fall off.
7. Press the MantleFlect Shield™ firmly onto the mantle, TV, sound bar or drywall while pressing down for 20 seconds.
8. You can use screws as an additional attachment method on drywall or wood mantle.
9. Foil Tape - The included foil tape can be used to line the edge the MantleFlect Shield giving it a finished look. This is optional.

©Heatshield Products, Inc.



Heatshield Products, Inc. | PO Box 462500 | Escondido, CA 92046 | (760) 751-0441 | www.heatshieldproducts.com